

STEERING GEAR AND LINKAGE


Removal / Installation

1. Loosen the wheel lug nuts.
2. Jack up the front of the vehicle and support it with safety stands.
3. Remove the wheels.
4. Remove in the order shown in the figure, referring to **Removal Note**.

Note

- Use a container or rags to collect the power steering fluid when disconnecting the pressure pipe and return hose.

5. Install in the reverse order of removal.
6. Tighten all necessary bolts and nuts to the specified torque.
7. After installation:
 - (1) Check for fluid leakage. (Refer to page N-22.)
 - (2) Bleed air from the system. (Refer to page N-21.)

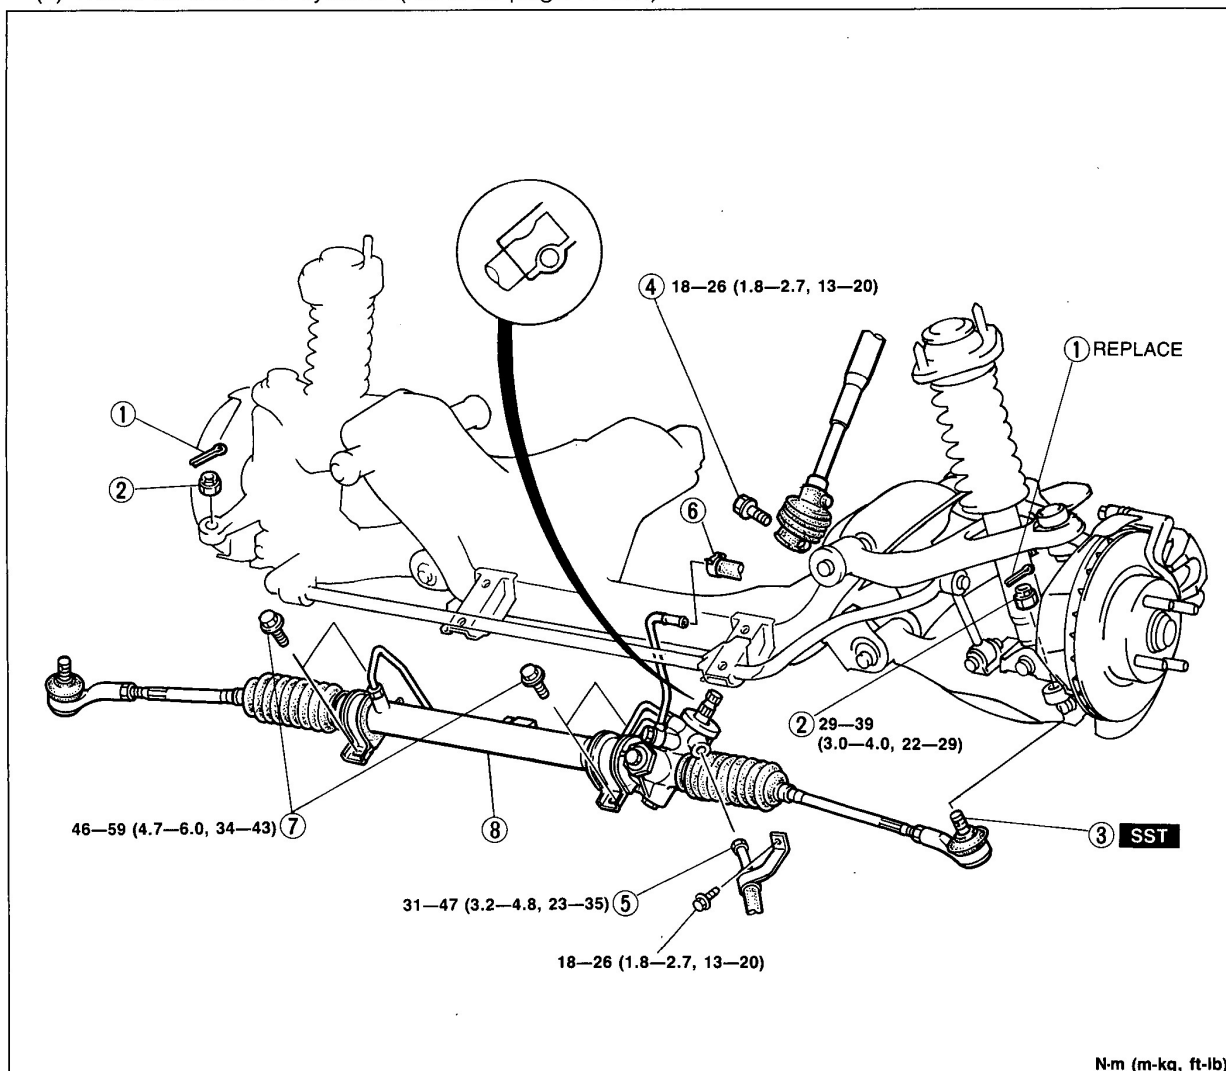

N-m (m·kg, ft·lb)

95E0NX-018

- | | |
|-----------------------------|------------------------------|
| 1. Cotter pin | 5. Pressure pipe |
| 2. Nut | 6. Return hose |
| 3. Tie-rod end | 7. Mounting bracket bolt |
| Removal Note page N-7 | 8. Steering gear and linkage |
| 4. Bolt | |